



# HEADLIGHT/BULB CONNECTION TIPS

**HEADLIGHT for**      **PART numbers**  
 PORSCHE CAYENNE    46660 / 46661  
 (03-06)


## HEADLIGHT INSTALLATION

### IDENTIFYING WIRING CONNECTION

1. Take the headlight out of the box and position it on a safe, flat area for handling.
2. Remove the back cover of the headlight by sliding off the metal security clips.
3. Locate the 12-pin connection harness.
4. This harness is for the headlight ballast, not the bulb.

### SETTING MY HEADLAMP FOR BULB CONNECTION

1. Before attempting to connect the bulb, please make sure you have the OEM or Valeo ballast (43736).
2. Pull the 12 pin plug through the bottom of the headlight.
3. Connect the 12 pin plug to the OEM or Valeo ballast.
4. Now you are ready to install your bulb and headlight into the vehicle.

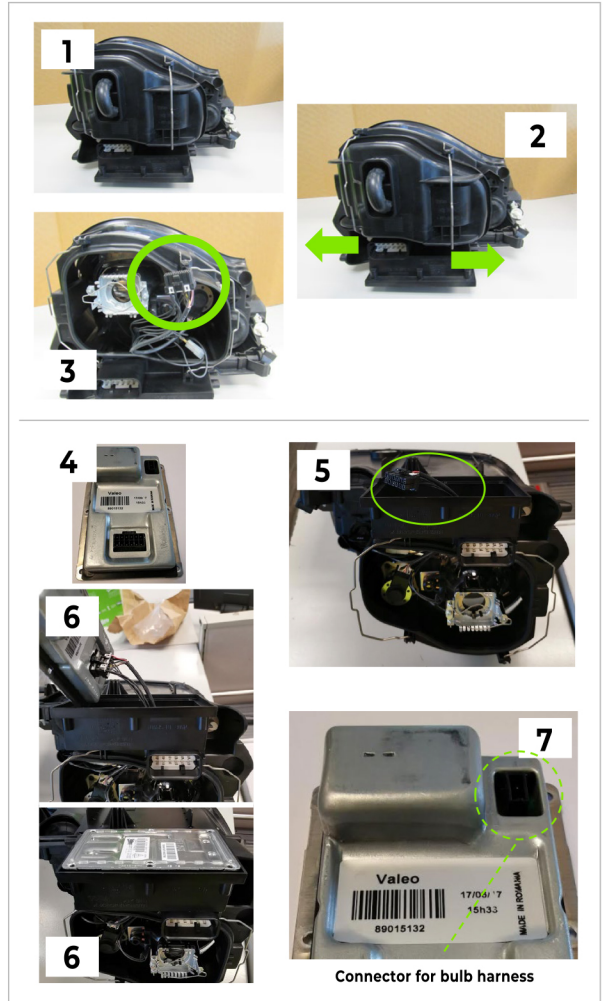

Connector for bulb harness

**Customer Service:** Call 1-888-718-2536 or email us at: [vsus.customerservice.mailbox@valeo.com](mailto:vsus.customerservice.mailbox@valeo.com)

